

# IG1 RELAY

## ON-VEHICLE INSPECTION

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

- 2. REMOVE IG1 RELAY

(a) Remove the IG1 relay from the instrument panel junction block.

- 3. INSPECT RELAY

(a) Measure resistance of the IG1 relay.

**Standard resistance**

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

- 4. INSTALL IG1 RELAY

- 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

